


# MESP402E – AVL SETTINGS



**I. Description:** The MESP402E controller must have settings properly configured to output data to the onboard telematics system. Please note configuring these settings whenever replacing a controller within a vehicle.

**II. Access Calibration Menu:** Use the following steps to enter the calibration menu.

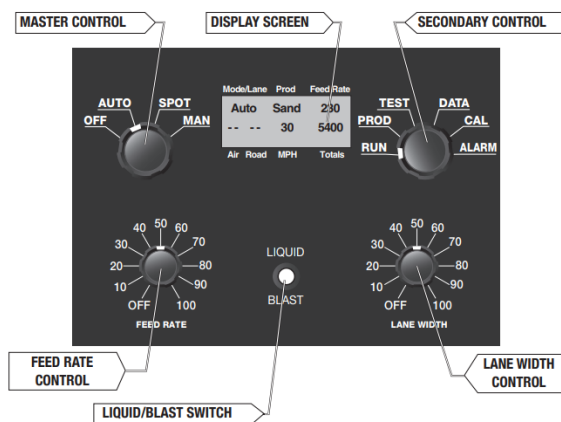

1. Turn the controller's Master Control on to any position.
2. Turn the Secondary Control to the "CAL" position.
3. The Pass Code is initially set at 5555.
  - To enter the first two digits of the pass code, press and hold the Liquid/Blast switch and turn the Feed Rate Control.
  - To enter the second two digits press down and hold the Liquid/Blast switch and turn the Lane Width control.
4. Release the Liquid/Blast switch, and you will now be in the ... ..

## III. Configuration Settings - AVL Output:

### A. Data Xmit Setting

- Using the "Feed Rate Control," navigate to Data Xmit Setting (Line 24)
- Hold the liquid / blast switch down while turning the lane width control. Set for **10 seconds**.
- Setting will automatically save.

LINE 24	24 Data Xmit Timer Off Sec	Off - 300 Sec
---------	-------------------------------	---------------

### B. GPS Mode Setting

- Using the "Feed Rate Control," navigate to GPS Mode (Line 32)
- Toggle the liquid / blast switch so that "Active" is highlighted.
- Setting will automatically save.

LINE 32	32 GPS Mode Off Active Passive	OFF, Active, or Passive
---------	-----------------------------------	----------------------------

**C. Exit menu** - Turn the Secondary Control to exit CAL menu.