


TG SERIES CLEARANCE IDLER CAP

1. The “Clearance Idler Cap” is to be installed on the TG series in the location were interference occurs (typically on the side opposite of the output shaft).
2. If an idler cap already exists, remove the cap and gasket.
3. On the side with the “Standard Cap” mount with two gaskets.
4. Use RTV # 598 Black recommended (not provided). Place gasket material in a small bead around the surface close to the bearing leaving a gap to prevent RTV from getting into the Bearing.
5. Install “Clearance Cap” with flat head capscrew closest to mounting pad and button-head capscrew in upper position. Torque to the flat screw to 6 Ft-Lbs and the button head to 8 Ft.Lbs.

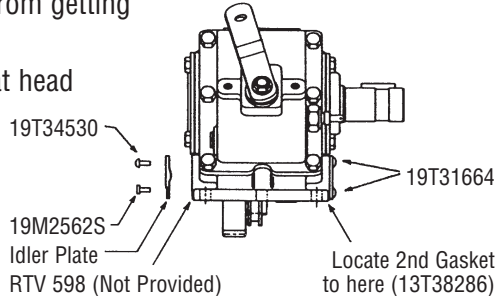

Member of the Interpump Group

IN04-03 (Rev. 04-17)

201 East Jackson Street • Muncie, Indiana 47305
800-367-7867 • Fax 765-284-6991 • info@munciepower.com • www.munciepower.com
Specifications are subject to change without notice. Visit www.munciepower.com
for warranties and literature. All rights reserved. © Muncie Power Products, Inc. (2012)