


# CS10 & CS11 SERIES CLUTCH SHIFT PTO


### PARTS LIST AND SERVICE MANUAL

FOR THE ALLISON WORLD TRANSMISSION

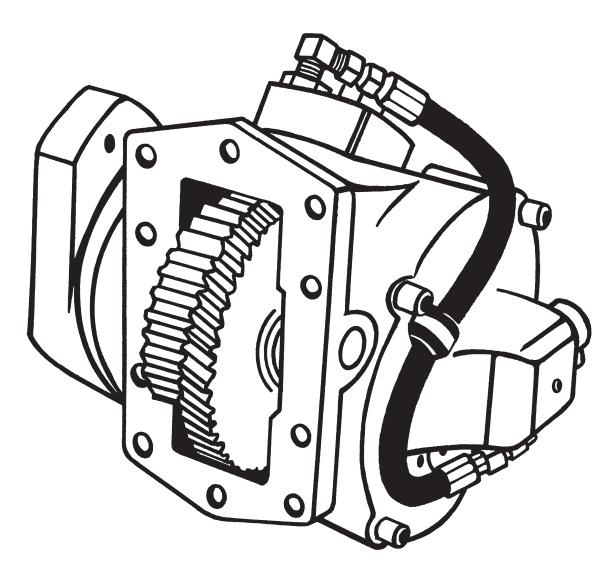

U.S. Pat. 5,542,306

# CS10 & CS11 SERIES CLUTCH SHIFT PTO

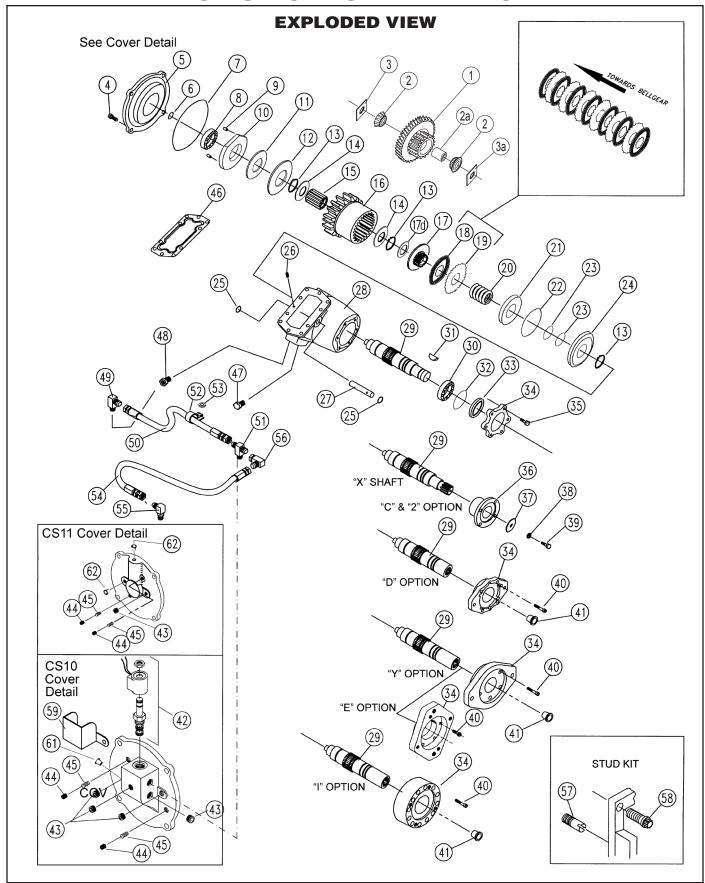



# CS10 WITH MODEL DATE CODE 5/1/12 AND PARTS LIST AND DESCRIPTION


ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER	DESCRIPTION
				$\vdash$	ntinued		Hvd Flange ("I" Only)
1	1	03T36214	Input Gear (05) (50T/27T) (See Table A for additional gears)	34 00	munuea 	14T37474 14T42875	Hyd Flange ( 1 Only) Hyd Flange ("S" Only) Hyd Flange ("EW")
2	2	See Table A	Input Bearing	35	6	19T39417	Capscrew ("B", "C", "X", "2")
2a	1	See Table A	Cone Spacer( 0.743/0.741)	36	1	14T31499 14T37498	Companion Flange ("C" Only) Companion Flange ("2" Only)
3	1	See Table C	Bearing Shim	37	1	14T43425 21T20092	Companion Flange DIN 120 ("9") Washer ("C","2" Only)
3a.	1	18T41452	Bearing Shim	38 39	1	21T20526 19T20522	Lock Washer ("C","2", "9" Only, If Req.) Capscrew ("C" Only)
4	4	19T39418	Capscrew "C", "D", "2"		1	19T38266	Capscrew ("X", "2", "9" Only)
5	1	15T36206 15T37970	Bearing Cover, Closed (CS10) Bear. Cov. w/o Valve Prov. (CS11)	40	6	19T39257	Socket Capscrew "D", "P", "S", "Z" Hyd
6	1	12T36081	0-Ring			19T35386 19T31577	Socket Capscrew "I" Hyd Socket Capscrew "E", "Y" Hyd
7	1	12T36207	0-Ring	41	1	25T35724	Cap Plug "D", "S" (Storage Only)
8 9	1 2	10T35994 26T36175	Bearing Roll Pin			25T35936 25T35725	Cap Plug "E", "I", "Y", "Z" (Storage Only) Cap Plug "P" (Storage Only)
10	1	21T36170	Drag Brake Plate	42	1	35T36092	Solenoid (12 Volt)
11	1	21T36172	Bronze Brake Disc	"-		35T36447A	Solenoid (24 Volt)
12	1 3	21T36171 24T36040	Drag Brake Rotor Snap Ring	43	4	25T21684	Pipe Plug
14	2	10T35989	Thrust Race	44 45	2 2	19T36174 27T36173	Set Screw Spring
15	1	10T62370	Bearing	46	1	13T35777	Gasket
16	1	02T36219 02T36220	Bell Gear (05) (47T) Bell Gear (06) (45T)	47	1	25T35999	Plug
		02T36221	Bell Gear (00) (43T)	48 49	1	25T35784 43T35867	Orifice Elbow
		02T36222	Bell Gear (08) (40T)	50		45T35865	Hose
17		02T36223	Bell Gear (10) (38T)	51	1	43T36231	Tee
17	1 1	02T36113 49TA4136	Clutch Hub (Before 4/99) Clutch Hub Assembly (4/99)	52 53	1	49T36283 21T36448	Hose Clamp Washer
	'		(Includes: 17a, 17b, 17c) (See Pg 9)	33	'	43TK3881	Standard Hose Kit
17a	1	49T37920	Clutch Hub (4/99)			43TK3885	HD For R.S. Installation
17b 17c	1 1	49T37921 24T37951	Clutch Flange (4/99) Snap Ring (4/99)	54	1	45T36274	Hose (Std 28")
17d	i	10T37930	Thrust Washer (4/99)			45T36273	Hose (HD R.S. 57")
			(Used w/49TA4136 Only)	55 56	1	43M68014 43T36445	Elbow
18	7	49T33564	Friction Disc	36	'	20MK1001	Elbow (use as needed)  Mounting Bolt Kit (Incl. 57, 58)
19	11 6	49T40641 49T40641	Spacer Disc (Before 4/99) Spacer Disc (4/99)	57	2	20T35779	Alignment Stud
20	1	27T36112	Spring	58	8	19T35778	12 Pt. Capscrew (30mm)
21	1	49T36114	Piston	59 60	1	49T36493 35T37928	Protector Remote Mount Valve Ass'y (CS11)
22 23	1 2	12T36054 12T36053	O-Ring O-Ring	00	'	33137920	(See Page 7)
24	1	49T36115	Piston Cup	61	1	25T34029	Cap Plug
25	2	12T35774	0-Ring	62 N.S.	2	25T34029	Cap Plug (CS11)
26 27	1 1	19T35785 07T35780	Set Screw Idler Shaft	IV.5.	ı	48TK3900 48TK5343	Installation Kit CS10 (12V) Installation Kit CS10 (12V) EW Output
28		01T42194	Housing (1 Arrangement)			40110040	Incl: 43TK5342 Hose Kit
Out	nut Sha	01T42195	Housing (3 Arrangement)  4/99 to accommodate the two-piece			48TK4037	Installation Kit CS11 (12v) Incl: Shift Kit, Gasket Pack, Stud Kit, Std. Hose Kit
clut	ch hub (	(17). When replacing s	haft in PTO prior to 4/99, clutch hub  ) must be added to required parts.			48TK4039	Installation Kit CS11 (24v) Incl: Shift Kit, Gasket Pack, Stud Kit, Std. Hose Kit
29	1	06T37932	OS "B" replaces 06T36039	N.S.	1	CS10-GSK	<b>Gasket Kit</b> Incl: (1)6, (1)7, (1)22, (2)23, (2)25, (1)32, (1)33, (1)46
23	'	06T37933 06T37934	OS "C", "2", "X" replaces 06T36072 OS "D", "S" replaces 06T36073	N.S.	1	CS10-RBK*	<b>Rebuild Kit</b> Incl: (1)3, (1)6, (1)7, (1)8, (2)9, (1)11, (3)13, (2)14,
		06T37935	OS "E", "Y", "Z" replaces 06T36074				(1)15, (7)18, (11)19, (1)22, (2)23,
		06T37936	OS "I" replaces 06T36832	N.O		4071/4054	(2)25, (1)30, (1)32, (1)33, (2)45,(1)46
		06T37937	OS "P" replaces 06T36799	N.S.	1	48TK4051	CS11 Conversion Kit Includes: 43TK4036 Hose Kit (page 6),
30	1 1	10T35775 26T01627	Output Bearing Woodruff Key				35T37928 Control Valve 12VDC,
32	1	12T35773	0-Ring				15TA4056 Cover Kit, and Solenoid
33	1	11T37795	Seal	N 0	4	05707700	Mounting Hardware.
34	1	15T39226 14T35767	Bearing Cov., Open ("2","B","C","X") Hyd Flange ("D","P")	N.S.	1	25T37702	Cap Plug
		14T39188	Hyd Flange ("Z")	1		Located Under PTO M	
1		14T40576	Hyd Flange ("E" Only)				pacer or bearings, these are only sold
		14T36007	Hyd Flange ("Y" Only)	WITH	nput ge	aı.	

### CS10 SERIES CONVERSION TO REMOTE ACTIVATION SOLENOID

#### **CONVERSION KIT 48TK4942**

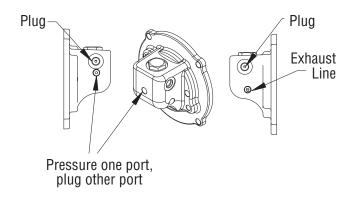

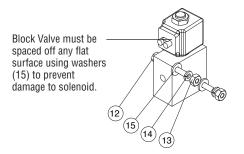

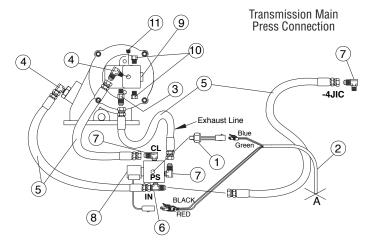

#### **CONVERSION KIT - 48TK4942**

ITEM	QTY	PART NO.	DESCRIPTION
1*	* 1	30T36727	Pressure Switch
2*	* 1	34T35872	Wire Harness
3	1	43T37503	1/8" NPT/JIC Fitting
4	2	43T35867	1/8" NPT/JIC Elbow
5	4	45T36274	Hose Assembly
6	1	43T36231	Straight Branch Tee
7	3		7/16-20 Str. Elbow
8	1		Valve 12VDC
9	1	25T40727	Cavity Plug
10	2	25T36726	Str. Plug
11	1	25T21684	Pipe Plug
SOL	ENOID I	MOUNTING I	HARDWARE
12	2	19T36623	Capscrew
13	2	22T35140	Nut
14	2	21T37991	Lockwasher
15	2	21T23153	Washer

<sup>\*\*</sup> Included with original PTO, not included in this kit.

# TABLE A INPUT GEAR ASSEMBLY — ITEM 1 & ITEM 2a (Sold only as assembly)

Input Sub Assembly	Designation	Based on Input Gear	Ratio	Teeth
03TA4619 03TA4620 03TA4621 03TA4622 03TA4623	A1005 A1006 A1007 A1008 A1010	03T36214 03T36215 03T36216 03T36217 03T36218	05 06 07 08 10	50T/27T 50T/29T 50T/31T 50T/34T 50T/36T

#### **TABLE C**


Bearing Shim - ITEM 3 (Sold only as kit)

18TK5233 Bearing Shim kit for models with date Code 5/1/12 or later 18TK 4586 Bearing Shim kit for models with date Code before 5/1/12

#### **INSTALLATION KITS**

#### CS10 INSTALLATION KIT - 48TK3882 (12V)


ITEM	QTY	PART NO.	DESCRIPTION
1	1	36MA1005	Switch Bracket
2	1	36T36271	Face Plate without light access
3	1	30T35687	Rocker Switch (12V)
4	1	33T36299	Fuse Assembly `
5	1	30T37954	Pressure Switch
4 5 6 7	1	34M18250	Female Spade Connector
	1	34M18009	Ring Terminal
8	2	34M18187	Female Spade Connector
9	1	34M18002	Butt Splice
10	1	34T35872	Wire Harness
11	6	37M18000	Wire
12	1	37T35674	Grommet
N.S.	1	36MK1007	Bolt Kit Incl. w/30T36270 & 30T36453
N.S.	1	43M05522	Elbow
	For 24v	Option Kit No	o. 48TK3891 (substitute)
	·	30T36453	Switch Assembly (Incl. Items #1 & 2 above & #3 below)
3	1	30T35712	Rocker Switch (24V)

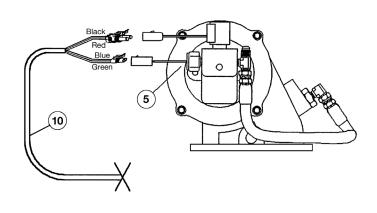


## CS11 CONVERSION KIT - 48TK4051 (12V) Use with 48TK3882 (N.S.)

ITEM	QTY	PART NO.	DESCRIPTION			
13	1	43T37503	1/8" NPT/JIC Fitting			
14	2	43T35867	1/8" NPT/JIC Elbow			
15	4	45T36274	Hose Assembly			
16	1	43T36231	Straight Branch Tee			
17	3	43M68014	7/16−20 Str. Thread Elbow			
18	1	35T37928	Valve 12VDC			
19	1	15TA4056	Cover Assembly (Includes Bearing & O-Ring (6 & 7) as shown on page 2.			
N.S.	2	19T36623	Capscrew			
N.S.	2	22T35140	Nut			
N.S.	2	21T37991	Lockwasher			
For 24	For 24v Option Kit No. 48TK4052 (Use with 48TK3891) Substitute:					
18	1	35T37967	Valve 24VDC			


### CS11 INSTALLATION KIT with REMOTE ACTIVATION SOLENOID

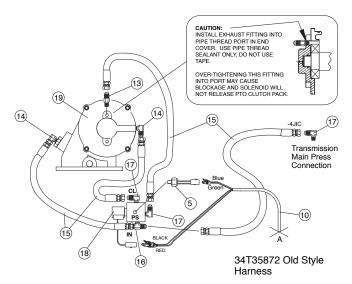

### CIRCUIT INSTALLATION When used without Overspeed Switch

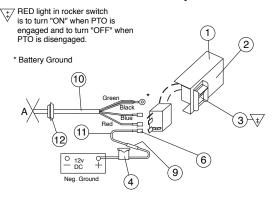

### CIRCUIT INSTALLATION When used with Overspeed Switch

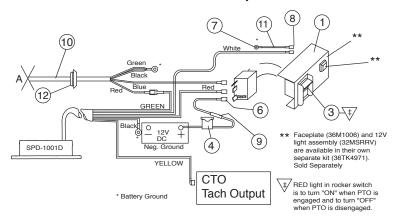

#### **ACCESSORY KITS**


#### **INSTALLATION HOSE KIT**


43TK3881 — HOSE KIT - STANDARD 28"

43TK3885 — HOSE KIT - FOR TOP R.S. HD SERIES 57"

43TK4545 — HOSE KIT - SPECIAL 17"

ITEM	QTY	PART NO.	DESCRIPTION
1	1	45T36274 45T36273	Hose Assembly - Std. 28" Hose Assembly - HD Top 57"
2 3	1	45T39186 43M68014 43T36445	Hose Assembly - Special 17" Elbow (Transmission) Elbow (use as needed) (43TK3881 & 43TK4545 only)

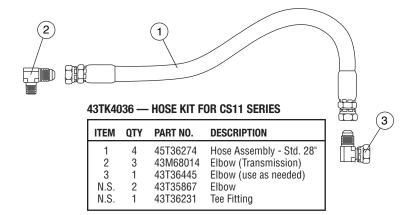


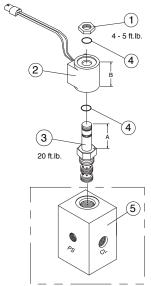

#### **SOLENOID VALVE**

**35T37928 (12V) -** *w/ 35T36092 Solenoid* **35T37967 (24V) -** *w/ 35T36447 Solenoid* 

ITEM	QTY	PART NO.	DESCRIPTION
1	8	22T39429	Nut
2	1	37T39088A	12V Coil (Delta)
		37T38997A	24V Coil (Delta)
3*	1	35T39577	Valve
4	2	12T39408	0-Ring
5*	1	N.A.	Manifold Blk(CS11)
		* (Not Sold	Separately)

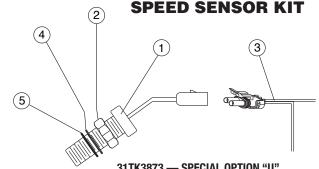


31	TK387	′3 —	SPE	CIAL	0P1	ION	"U"

ITEM	QTY	PART NO.	DESCRIPTION
1	1	31T35108	Mag Pickup
2	1	21T35109	Jam Nut
3	1	34MA1415	Wiring Harness
4	1	21T36099	Flat Washer
5	1	12T35774	0-Ring

#### 20MK1001 — BOLT KIT FOR CS10

QTY	PART NO.	DESCRIPTION
6	19T40266	12pt. Capscrew - 30mm
2	19T37727	12pt. Capscrew - 25mm
2	20T35779	Alignment Stud
6	21T40360	Nordlock Washer
ı		

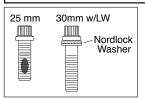





#### **BOLT KIT**

The two(2) 25mm long capscrews are to be used in positions 1 and 3 as shown in diagram (Fig. 1). The six(6) 30mm long capscrews and six(6) special lock washers are used in positions 2, 4, 5, 6, 7, & 8.

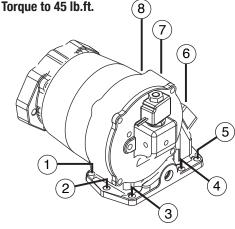


Figure 1. - CAPSCREW PLACEMENT

#### **IMPORTANT**

The CS10 includes the mounting kit, special shim/gasket, high pressure hose hookup kit, wiring harness, dash bracket kit, and installation instructions. The PTO is available with a pulse generator (pick-up) for use with the Muncie Digital Tachometer - 38MK2000 (request MP92-04) or use with the Muncie digital switch SPD-1001D to control the engagement or overspeed protection of the PTO. Contact your Muncie Application Specialist for assistance with these options.

#### CS10 & CS11 DISASSEMBLY AND REASSEMBLY

(Reference Exploded View on page 3)

#### $^{7}$ denotes special service procedures

#### **DISASSEMBLY PROCEDURE**

- 1 Remove the CS10 input gear, by removing the set screw in the pad and driving the idler shaft from the housing. (26, 27)
- 2 Remove the set screws (44) from the bearing cover (5) which hold the drag brake springs (45). Position the housing so that the springs fall from housing.
- 3 Remove the four large socket capscrews (4) which hold the back cover to the PTO housing.
- 4 Position the housing against a bench block and hit the end of the output shaft with a soft face hammer to remove the entire output shaft assembly with bearing cover (5).
- 5 Remove the two pipe plugs (43) from the bearing cover. This exposes the ball bearing assembly within the cover.
- Wising a 1/4" punch and alternating between the two holes, drive the bearing and shaft assembly from the bearing cover.
- Using a bearing puller remove the rear bearing (8) by grabbing the drag brake plate (10) and removing both pieces. The bronze brake disk (11) can be removed.
- 8 Insert four ¼-20 capscrews into the drag brake rotor (12) until they just touch the back of the bell gear. Using an "X" pattern screw the capscrews in at ¼ turn intervals until the brake rotor is free of the output shaft (29).
- 9 The piston and clutch pack may be serviced without removal of the drag brake. Using snap ring pliers, remove the snap ring (13) located on the output shaft end while gently pushing on the piston cup (24).
- 10 Pull the piston cup (24) from the shaft and the piston (21) will go with it.
- 11 Tap the piston cup on a wood surface to remove the piston.
- 12 Remove the spring (20). The clutch friction discs (18) and spacer discs (19) and inner clutch hub (17) can be removed by pointing the shaft end down.
- 13 With the drag brake removed, the snap rings (13) on this end of the bell gear can be removed with snap ring pliers. This allows the bell gear to be removed towards the closed end. The internal bearing (15) of the bell gear can easily be removed.

#### REASSEMBLY PROCEDURE

- 14 The reassembly of the unit is made in reverse of the disassembly. The re-use of seals, O-Rings and snap rings are not recommended.
- Be sure to lubricate the O-Rings and all bearings upon installation. It is important to position drag brake plate so that input gear clears. This is the reason for the flat sides of the plate. Torque capscrews to the values shown or to the following values.

  5/16 capscrews 18 ft.lb. 3/8 capscrews 36 ft.lb. 1/4 set screw 9 ft.lb.
- The Input Gear is replaced as a set which includes the gear, cone spacer, and bearings. See Table A. Slide this sub-assembly into the housing to line up the idler shaft.
- 17/ Tap the idler shaft into the housing and through both bearing races.
- Tap the idler shaft in the reverse direction so that it is flush with the bearing in this assembly. Insert the thickest shim that can be installed by hand in the gap between the bearing and housing. Remove shim and select the next thicker shim and drive it into the gap. Rotating the gear to make sure it easily rotates. The recommended bearing pre-load is .002" to .006" loose. (The cone spacer sets this per-load and measurement is not required.)


  19 Tap the idler shaft into position and install set screw.

#### SOLENOID VALVE INSTALLATION (CS10 ONLY)


- Separate the coil from the valve assembly. Insert the valve cartridge into the rear cover and torque to 20 ft.lb.
- 21 Slip one O-Ring and the coil over the valve. Slip the second O-Ring on.
- Place thread locking compound on the post threads and install nut. Torque the nut 4 to 5 ft.lb. max.
- 23/ Place thread sealant on pipe plugs. Torque 10-16 ft.lb.

#### DRAG BRAKE ADJUSTMENT (CS10 ONLY)


- When installing the rear cover be sure to align the roll pins in the drag brake plate with the holes in the rear cover. **NOTE:** It is important that one of the flat edges of this plate is positioned towards the input gear.
- 25 After the cover has been attached to the housing insert the springs into the holes
- 26 Insert the setscrew over the spring and turn the screw four (4) full turns.
- 27 Follow the test and adjustment procedures in the CS10 operator's manual.

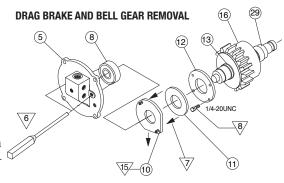


#### **TAPER ROLLER BEARINGS**

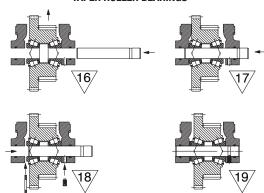


**DROP-IN SOLENOID** 

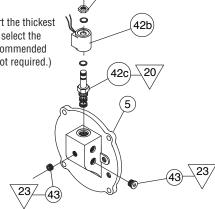

์42a

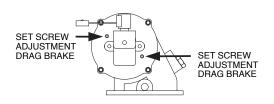

#### MODEL NUMBER CONSTRUCTION

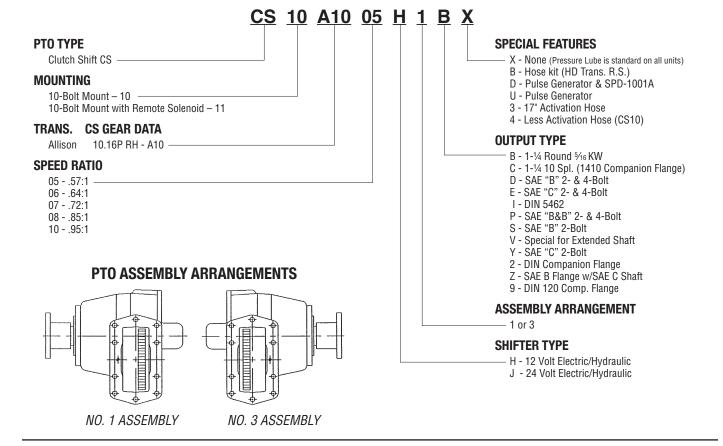


#### **CS10 CLUTCH HUB REPLACEMENT**

Effective April 1999 the clutch hub supplied in the CS10 Series PTO has the two piece clutch hub as shown on this page. The two piece hub consists of a splined hub and a flange which is held together by a snap ring. Because of this design change the clutch pack stack up has changed as shown on page 3.

Begin by assembling the new Clutch Hub:

- 1. Place the flange (17b) on to the Clutch Hub (17a) so that the recessed area of the flange is against the splines. Fig. 1.
- 2. Using snap ring pliers install the Snap Ring (17c) on to the Clutch Hub (17a).
- 3. The New Clutch Hub requires a new output shaft. Select the appropriate shaft and install the Thrust Washer (17d) against the splines on the out put shaft (29). Fig. 2.
- 4. Hold thrust washer in place with the Snap Ring (13).

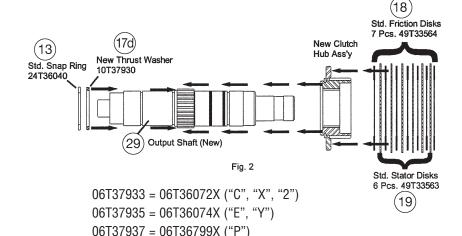

(17b)

Flange

49T37921

(17c)

Snap Ring

24T37951

(17a)


Clutch Hub

49T37920


06T37932 = 06T36039X ("B") 06T37934 = 06T36073X ("S", "D") 06T37636 = 06T36832X ("I")


Current Inventory that has been reworked will have an "X" marked on the shaft by the part number.

#### **DIMENSIONS** IN INCHES (MM)

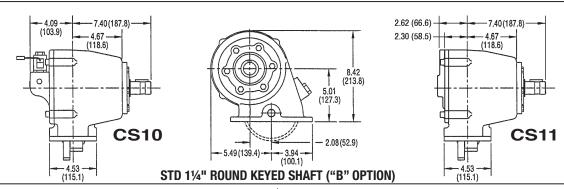


#### 11/2" 10 SPLINE W/1410 SERIES FLANGE ("C" OPTION)

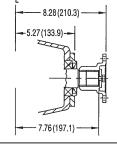


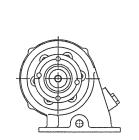


SAE "B" 2- & 4-BOLT 7/8" 13 SPLINE ("D" OPTION)

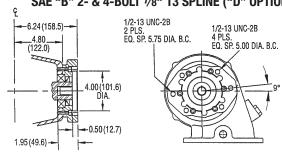


#### SAE "C" 2- & 4-BOLT 11/4" 14 SPLINE ("E" OPTION)

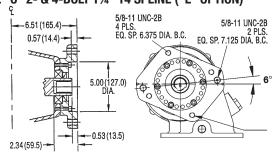


DIN 5462 36MM 8 SPLINE ("I" OPTION)

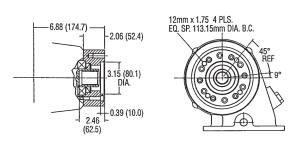


#### SAE "B&B" 2- & 4-BOLT 1" 15 SPLINE ("P" OPTION)

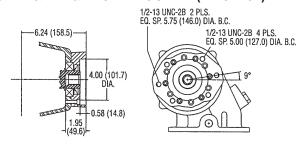


**SAE "B" 2-BOLT 7/8" 13 SPLINE ("S" OPTION)** 

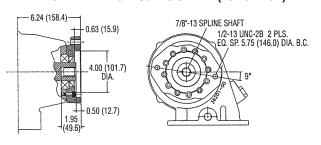


#### SAE "C" 2-BOLT 11/4" 14 SPLINE ("Y" OPTION)

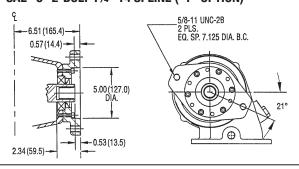


#### 1½" 10 SPLINE W/DIN 100 FLANGE ("2" OPTION)

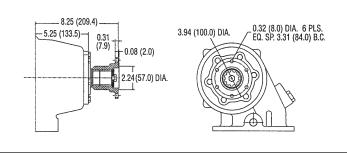

#### SAE "B" FLANGE W/SAE "C" SHAFT ("Z" OPTION)

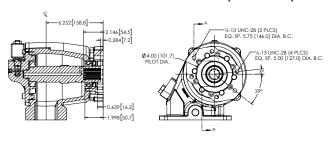

#### SPECIAL FOR EXTENDED SHAFT ("V" OPTION)

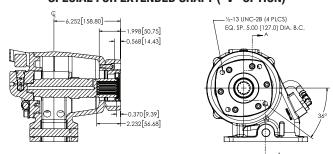



SP95-03 (Rev. 02-19)